




**GIRtech**

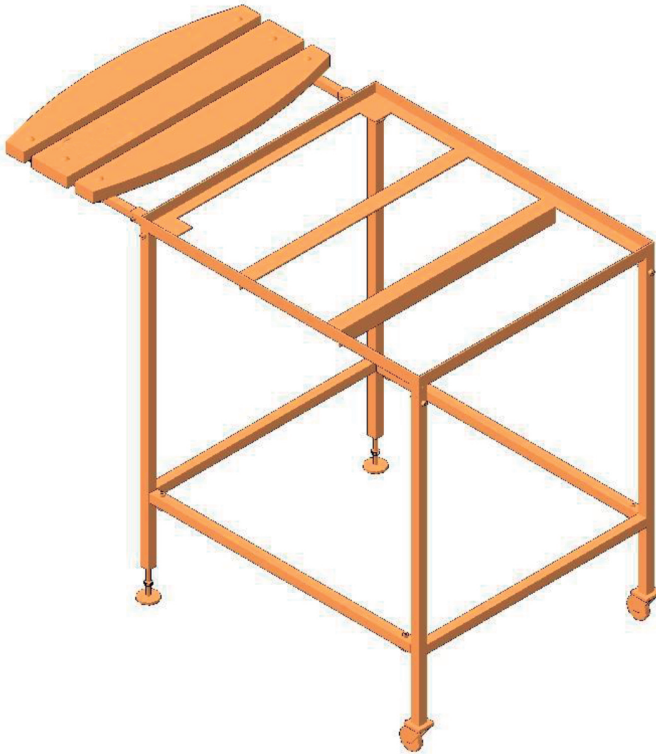

**BASE**

**TABLE FOR MULTIFUNCTIONAL  
BRAVO WOOD OVEN**

**PASSPORT**



Our products are designed for easy use. To maximize the benefits of using the device and guarantee the security, it is very important to read this data sheet that also includes the operation manual.

We are constantly working on the product reliability; thus, its design may contain minor changes and improvements that are not included in this data sheet but do not affect the product performance.

## BEFORE USE

- read this manual carefully;
- use the GIRtech BASE table only for its intended purpose. The GIRtechBASE table is designed only to mount the GIRtech BRAVO multifunctional wood oven on it;
  - this manual and all other addendums should be available for those who are to operate the GIRtech BASE table;
  - to prevent injuries, personal protection measures and special tools shall be used during assembling;

## TGIRtechBASE TABLE SPECIFICATIONS

The GIRtechBASE table is designed for home use

Operating length, mm	1 100±5
Length with the table-flap down, mm	765±5
Width, mm	620±5
Height, mm	835±5
Weight, kg	12,5
Max. load, kg	150

It complies with the requirements of drawing, dwg. ZU-23. Engineering materials correspond to C235 Group according to GOST 27771-88 to operate in areas with a design ambient temperature of up to - 40 °C. The constructions have an anti-corrosion coating in accordance with the requirements of GOST 9.101:2004 and SnIP (construction rules and regulations) 2.03.11-85.

## USAGE AND DESCRIPTION

The GIRtechBASE table is designed only to mount the GIRtech BRAVO multifunctional wood oven on it.

For ease of use, it is supplied with a front table-flap.

**WARNING! USE IT ONLY FOR THE PURPOSE SPECIFIED.**


## TABLE BACIS ELEMENTS





The table is delivered disassembled. Each of the component parts is numbered 1 to 9. The details are shown in the figure.

A complete set contains the following parts:

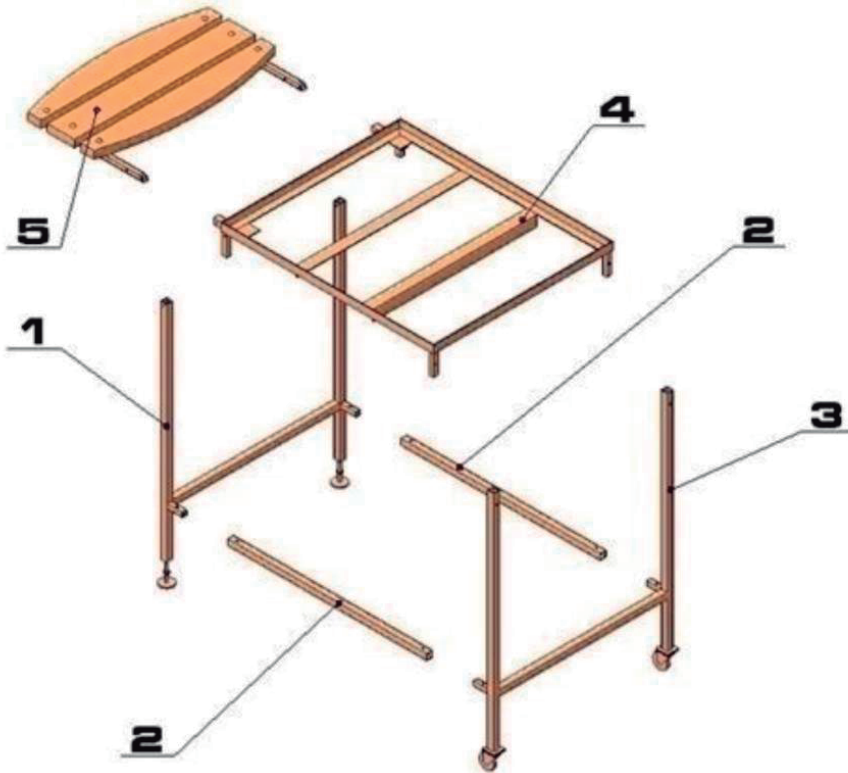1. Table construction elements - 6 pcs.
2. Bolt M6x30 - 6 pcs.
3. Bolt M6x50 - 2 pcs.
4. Nut M6 - 8 pcs.
5. Hex key - 1 pc.

### SET VIEW



<b>6</b>	<b>Bolt M6x30</b>	<b>7</b>	<b>Bolt M6x50</b>	<b>8</b>	<b>Nut M6x</b>	<b>9</b>	<b>Hex key</b>
							
<b>6 pcs.</b>		<b>2 pcs.</b>		<b>6 pcs.</b>		<b>1 pc.</b>	

## ASSEMBLING

1. The GIRtech BASE table is delivered disassembled. It is required to be installed on an even and solid surface.
2. During installation the following requirements shall be met:
  - The GIRtech BASE table is designed to be installed on an open area (in the garden, backyard, homestead land);
  - The GIRtechBASE table must be installed on a basement made of nonflammable materials at a distance of at least 500 mm from combustible constructions;
  - The floor made of flammable and nonflammable materials under the whole GIRtech BASE table construction shall be protected with a steel sheet sized 765 x 620 mm, at least 0.5 mm thick;
  - The distance between the back side of the GIRtech BASE table and the wall shall be at least 1.250 mm;
  - The distance between the front side of the GIRtechBASE table to the opposite wall shall be at least 1.250 mm.;
  - The distance to other technological equipment on the left and/or on the right side shall be at least 100 mm.
  - The distance between the arch top and an unprotected ceiling shall be 1.200 mm, the distance between the oven with heat-insulating closure and a protected ceiling shall be 800 mm;
3. The GIRtech BASE table shall be installed according to the assembly manual and the operation manual supplied as part of a set.
4. To succeed in assembling the GIRtech BASE table and in its correct operation, strictly follow the instructions.

## CHILDREN' SAFETY

CAUTION! When assembling the structure, keep small parts out of sight of the children as they can swallow them and choke.

Do not leave the children unattended near the GIRtech BASE table and the GIRtech BRAVO oven. Do not let the children to come up to the unit unless they are under supervision.

## SAFE OPERATION

- Physically, visually, and mentally disabled adults and children, people, who due to a lack of experience and/or knowledge fail to operate the heating unit safely, shall not be left to operate it unless they are supervised by a competent person.
- The GIRtech BASE table and the GIRtech BRAVO oven shall be used only for food preparation.

## ACCEPTANCE CERTIFICATE

The GIRtechBASE table fits for service

Date of manufacture \_\_\_\_\_

Lot number \_\_\_\_\_ Quantity \_\_\_\_\_

Seal here \_\_\_\_\_

Signature of the person in charge of acceptance





**GIRTECH.COM.UA**